

DIAL-A-TEMP™

Ideal for Controlling Heat in Wood, Gas, Coal Burning Fireplaces and Stoves


WALL OUTLET INSTRUCTIONS

1. Unplug present “fan cord” from wall.
2. Plug in “fan cord” into receptacle on bottom of Dial-A-Temp.
3. Plug connected Dial-A-Temp into wall socket or into extension cord for easy access.

LIMITED WARRANTY

For a period of one year from the date of original purchase, KB Electronics, Inc. will repair or replace without charge devices which upon our examination prove to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused, or improperly installed and has been used in accordance with the instructions and/or ratings supplied. The foregoing is in lieu of any other warranty or guarantee, expressed or implied. KB Electronics, Inc. is not responsible for any expense, including installation and removal, inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture or sale. Some states do not allow certain exclusions or limitations found in this warranty and, therefore, they may not apply to you. In any event, the total liability of KB Electronics, Inc., under any circumstance, shall not exceed the full purchase price of this product. (rev 2/2000).

Register this product online at kbelectronics.com/registration.htm

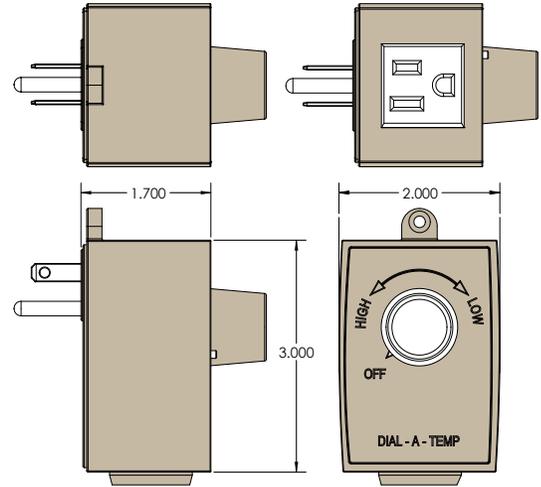

KB ELECTRONICS, INC.

12095 NW 39th Street, Coral Springs, FL 33065-2516
(954) 346-4900 • Fax (954) 346-3377 Call Toll Free (800) 221-6570
info@kbelectronics.com • www.kbelectronics.com

